



- 1 Remove Downlight Lens from Socket Bridge/Lens Retainer. Remove Ballast Cover Screws (each end).



If uplight is required, remove Uplight Lens Cover.

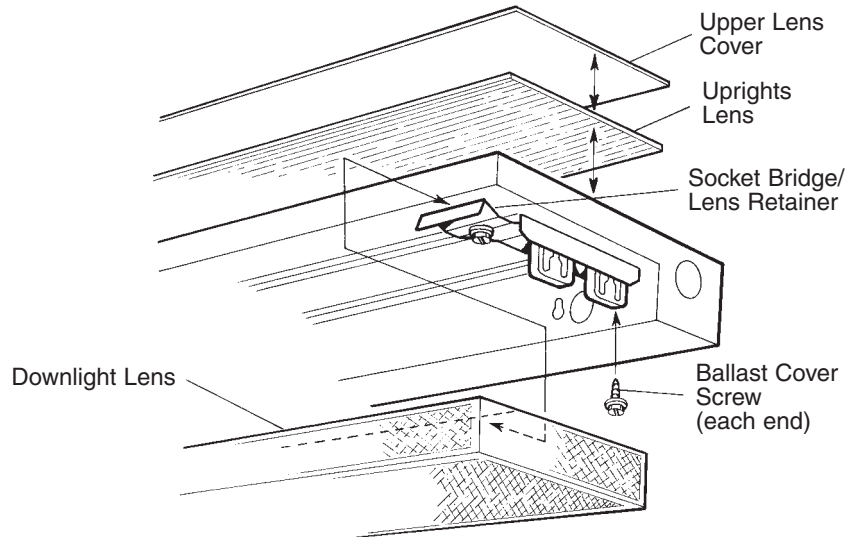

- 2 Remove Ballast Cover. Secure Housing to wall with Screws (by others). Make wiring connections. Install Lamps (by others).

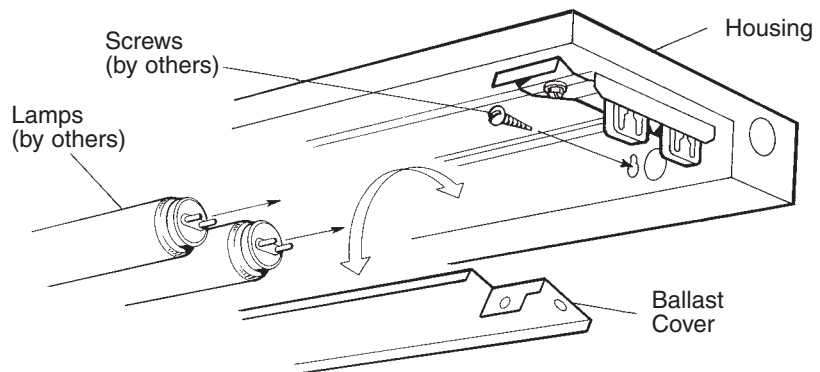


- 3 Install Ballast Cover and Downlight Lens securing Downlight Lens to Housing with Socket Bridge/Lens Retainer.

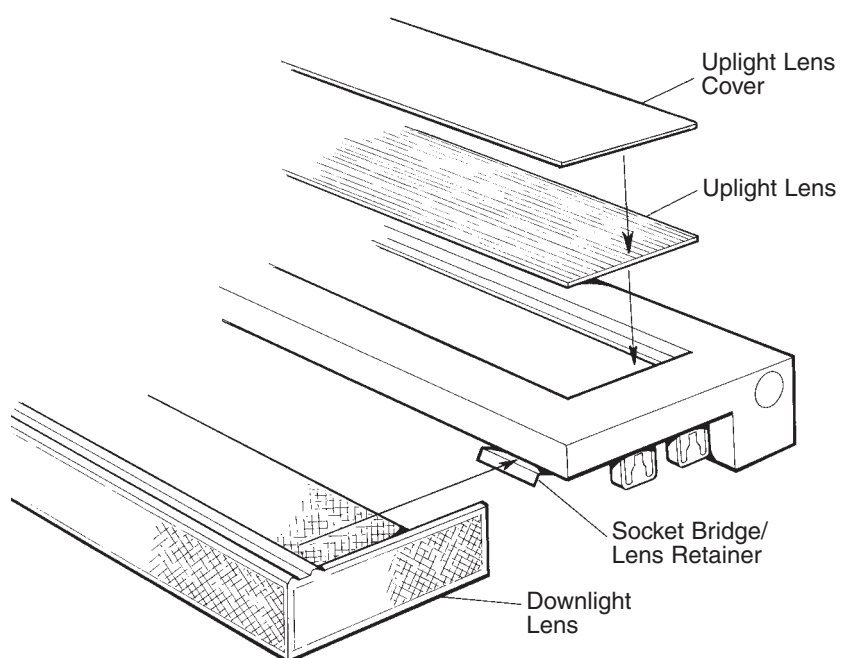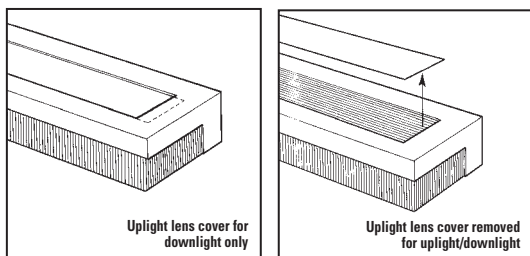


- ① Remove Downlight Lens from Socket Bridge/Lens Retainer. Remove Ballast Cover Screws (each end).



If uplight is required, remove Uplight Lens Cover.

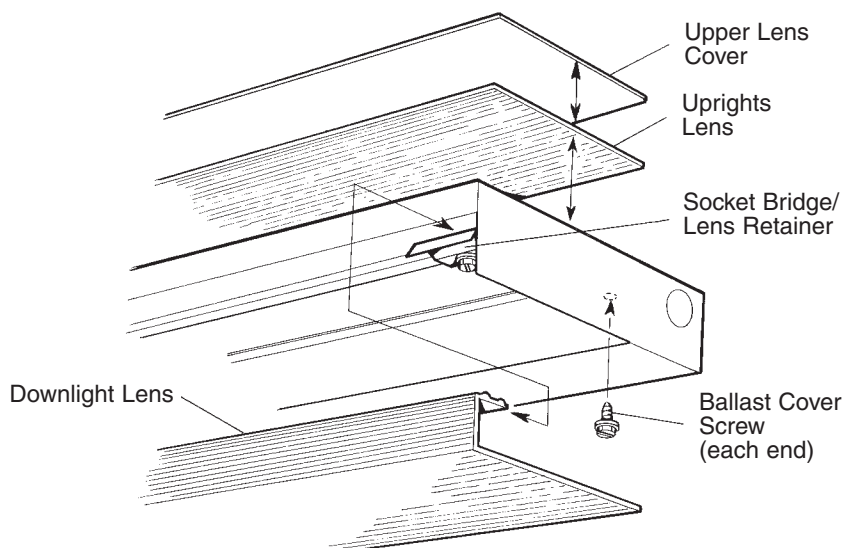

- ② Remove Ballast Cover. Secure Housing to wall with Screws (by others). Make wiring connections. Install Lamps (by others).

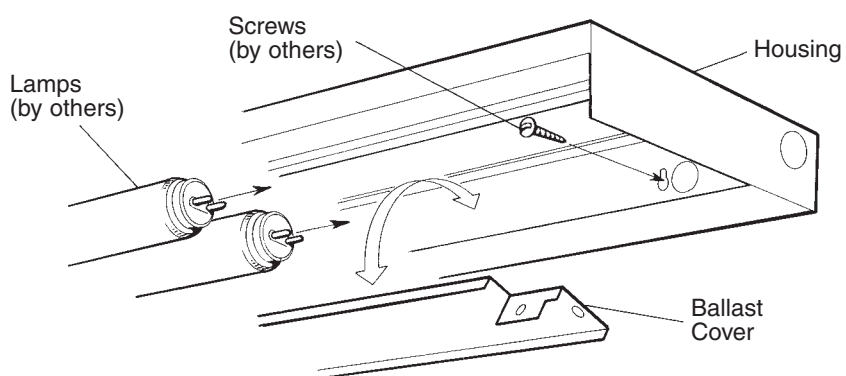

- ③ Install Ballast Cover and Downlight Lens securing Downlight Lens to Housing with Socket Bridge/Lens Retainer.

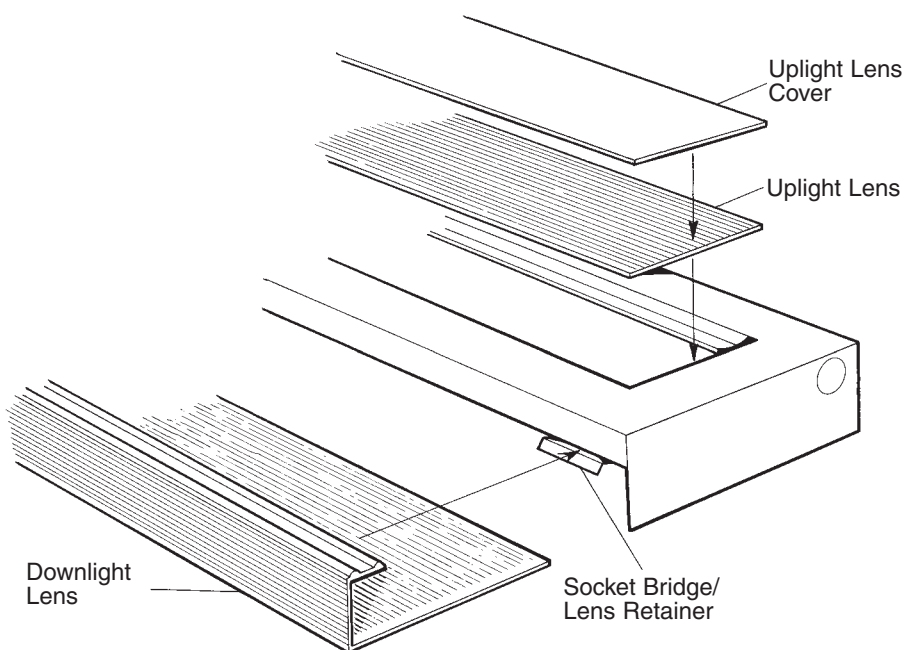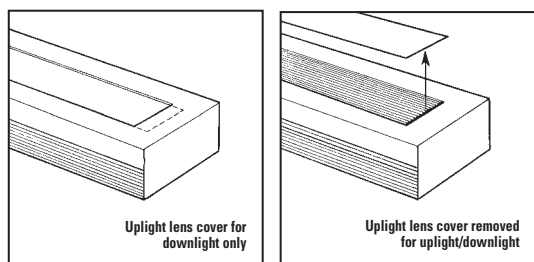

59-30238-001 Rev. A

Printed in U.S.A.